



# Garmin Nuvi 2689LMT Screen Replacement

The touch screen display of the Garmin Nuvi 2689LMT is the most essential part of the device. It gives you a 3D-animated view of your current location and allows you to input commands with the touch of a finger.

Written By: Spencer



## INTRODUCTION

In this guide, we are going to provide step-by-step instructions that will show how to properly replace the device's touch screen.

---



### TOOLS:

- [iFixit Opening Tools](#) (1)
  - [Heavy-Duty Spudger](#) (1)
  - [T5 Torx Screwdriver](#) (1)
  - [Tweezers](#) (1)
-

## Step 1 — Screen



 
- Remove the stand by depressing the tab and rocking the round interface back away from the tab, pulling it away from the Garmin unit.

## Step 2



- Remove the four, 4mm hex screws from the four corners of the unit, using a T5 bit.

## Step 3

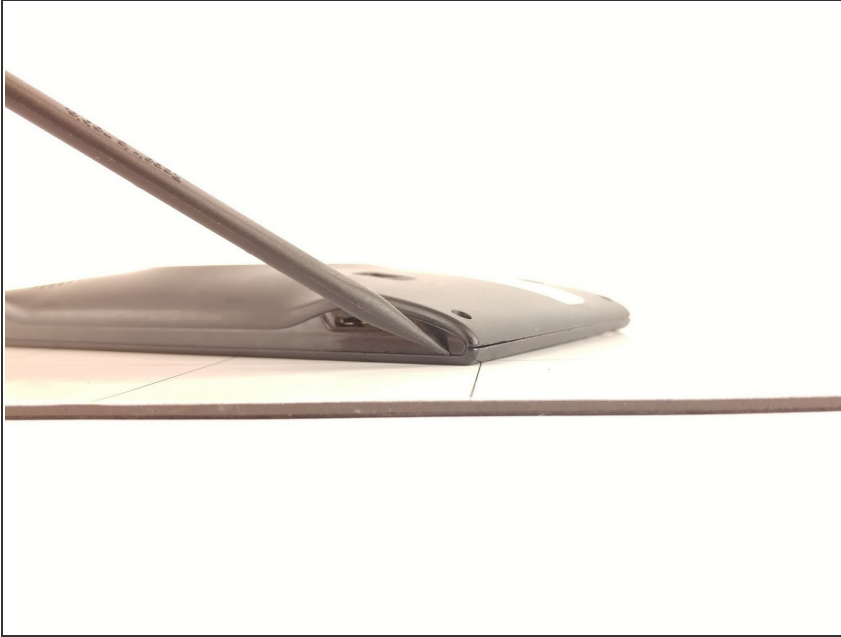


- ❗ Place the unit screen-side down flat, with the bottom facing you. There are two seams, the one on top is artificial.
- This is the real seam, open it with a plastic opening tool in step 4.

## Step 4



 - Firmly force a plastic spudger into the bottom seam and pry open a section. Use a prying/pushing motion to force the tool into the unit until you feel a click.
- Repeat this all the way around the seam.

## Step 5

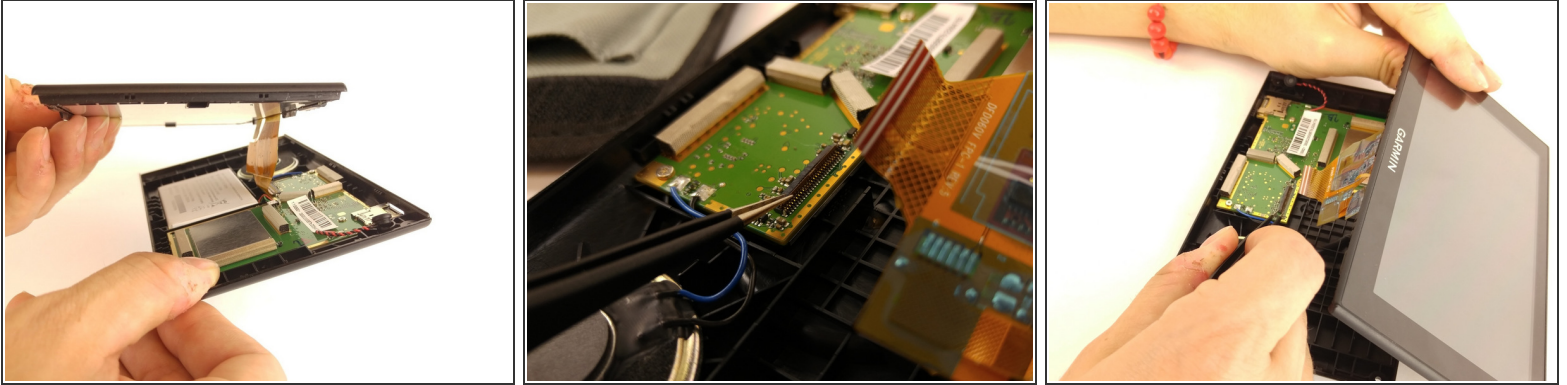

- Do not attempt to separate the unit until all the tabs have been separated. Once the seam is completely separated, you can lift the back away from the screen easily.

## Step 6



- Retrieve a new screen and connect the flat-gold wire to the socket from where you removed the old screen.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-19 08:21:58 AM.